

HOBOWare[®] Pro Software Updates for Windows and Mac Computers



Qualified versions:

The following updates to HOBOWare software are available to customers of Onset Computer Corporation under the terms of the License Agreement contained in the installation programs. Users of HOBOWare for Windows (2.0.x or 2.1.x) and HOBOWare Pro for Windows (2.2.x, 2.3.x, 2.4.x, 2.5.x, 2.6x, and 2.7.x) can download and install HOBOWare Pro 2.7.3 as an update to their existing installation.

Users of HOBOWare for Mac (2.0.x or 2.1.x) and HOBOWare Pro for Mac (2.2.x, 2.3.x, 2.4.x, 2.5x, 2.6x, and 2.7.x) can download and install HOBOWare Pro 2.7.3 as an update to their existing installation.

Added in HOBOWare Pro 2.7.3 for Win and Mac:

- Support for License keys that define the operation of HOBOWare as HOBOWare Pro or HOBOWare Lite. Using these keys the HOBOWare

Av. da Invernada , 12 - Vila Congonhas
São Paulo -SP Tel. / Fax (011) 5096-4654 - 5096-4728


E-mail vectus@vectus.com.br

Para honra e glória de **ixeus**



installer can be downloaded from the Onset Web site, and can be run in a Trial mode for 30 days. When a full license key is used, the Trial can be converted to Pro or Lite by simply installing the key.

- The means to run several Data Assistants at Launch time and then use the defined parameters automatically at readout & plot time to generate new series.
- The means to define alarm conditions that can be loaded into U30 loggers to control the logger's relay depending on those alarm conditions.
- Enhanced export and data formatting options to allow the user more latitude in exported data formats.
- A service that provides for downloading text files from HOBOLink and opening them directly in HOBOWare.
- Support for the new U-DT-2 shuttle built for the U30 logger.
- HOBOWare 2.7.3 provides a French user interface when running on a computer configured in a French locale. The translation is Parisian French, but the French user interface will appear in any locale identified by the ISO-639 language code of "fr".

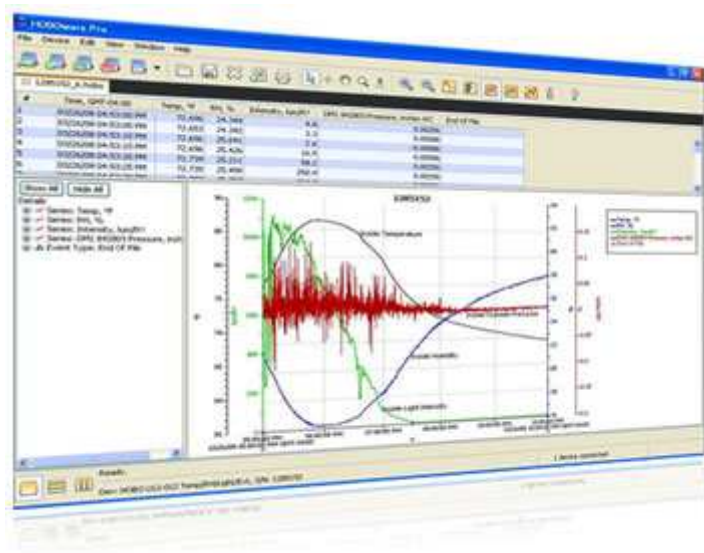

Av. da Invernada , 12 - Vila Congonhas
São Paulo -SP Tel. / Fax (011) 5096-4654 - 5096-4728

E-mail vectus@vectus.com.br

Para honra e glória de **IXOÛS**



HOBOWare Pro vs. HOBOWare Lite		
Features	Pro	Lite
Support for HOBO U-Series Loggers	*	*
Support for HOBO Weather Station, HOBO Micro Station, and HOBO Energy Logger Pro loggers	*	
Configure HOBO FlexSmart modules	*	
Support for HOBO U-Shuttle and HOBO Waterproof Shuttle	*	
Launch supported loggers	*	*
Launch time-saving options	*	
Graphing and analysis with ability to view multiple data files on one graph	*	*
Readout and open-file time-saving options	*	
Filters to extract key series information	*	*
Subset Statistics Tool	*	
Save (Project) Changes	*	*
Import ASCII text data	*	
Export ASCII text data	*	*
Check Logger Status and view current readings	*	*
Data Assistants for Linear Scaling, Pulse Scaling, and kWh (included with software)	*	
HOBOWare Setup Assistant	*	
Ability to add Data Assistants (Grains per pound and Growing degree days)	*	
Bulk Export Tool	*	
Ability to add other plug-in tools (ie. Alarm Readout Tool and Bulk Export Tool)	*	
Access remote loggers through Ethernet (requires supported Ethernet server)	*	

Av. da Invernada , 12 - Vila Congonhas
 São Paulo -SP Tel. / Fax (011) 5096-4654 - 5096-4728
 E-mail vectus@vectus.com.br
 Para honra e glória de **ΙΧΘΥΣ**