


Typical Meter Installation

(New construction or scheduled shutdown)

- Acceptable to install in vertical pipe
- Position meter anywhere in upper 180° for horizontal pipe

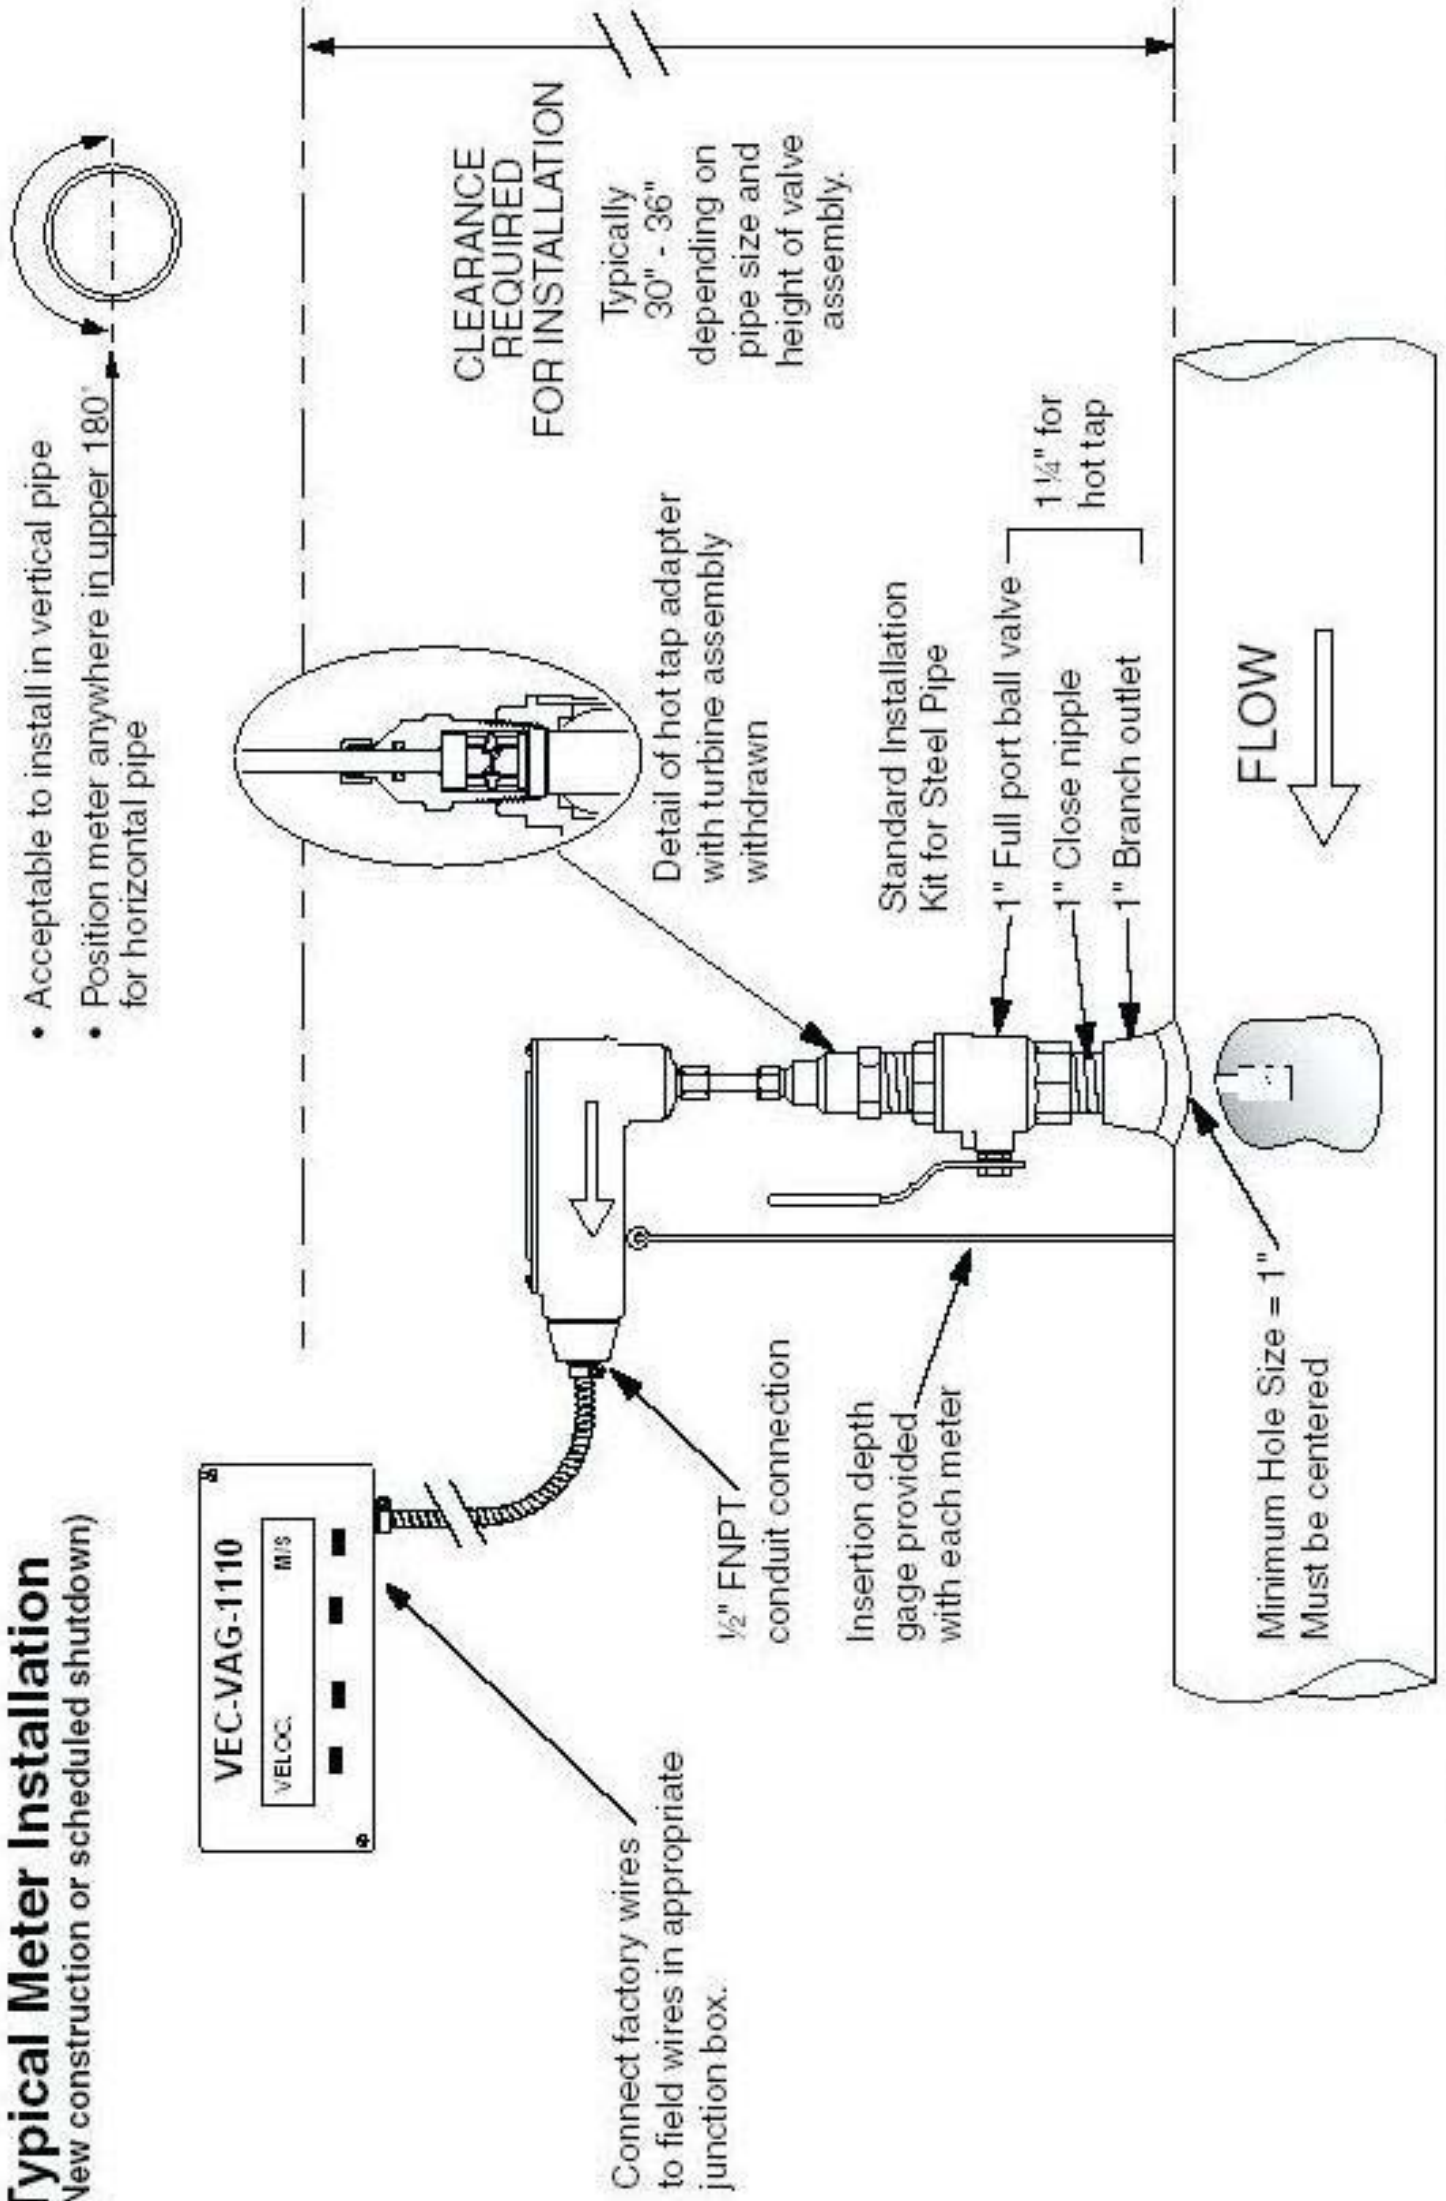

Note: Installation kits vary based on pipe material and application. For installations in pressurized (live) systems, use "Hot tap" 1 1/4 inch installation kit and drill hole using a 1 inch wet tap drill.